

GLOBE BRONZE 56CM FIRE PIT WITH GRILL

BGAGLOBEBZE
V1.0

User Instructions - Please keep for future reference



Tools required (not included)



IMPORTANT! – Carefully remove any packaging before use, but retain the safety instructions.

These instructions form part of the product.

Please take note of all of the safety warnings listed in these instructions.

Please read these instructions in their entirety and retain them for future reference.

These instructions should be stored with the product.

This product is for domestic use **ONLY** and should not be used commercially or for contract purposes.

Failure to adhere to these instructions could result in property damage, personal injury or death.

Produced in China for GLG Australia PTY LTD

www.barbequesgalore.com.au

WARNINGS

- This product is intended **FOR OUTDOOR USE ONLY. DO NOT USE INDOORS.**
- **WARNING!** - ALWAYS keep children and pets at a safe distance from the product when in use.
- **NEVER** leave a burning fire unattended.
- **DANGER** of carbon monoxide poisoning - **NEVER** light this product or let it smoulder or cool down in confined spaces.
- **DO NOT** use this product in a tent, caravan, car, cellar, loft or on a boat.
- **DO NOT** use under any awnings, parasols or gazebos.
- **FIRE HAZARD** – Hot embers may emit while in use.
- **WARNING!** - **DO NOT** use petrol, white spirit, lighter fluid, alcohol or other similar chemicals for lighting or relighting.
- This product is **ONLY** suitable for use with untreated wood, logs, or charcoal.
- **DO NOT** use coal in this product.
- **DO NOT** use this product on decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark.
- Ensure that the product is positioned at least 2m away from flammable items. Also ensure that there is a minimum overhead clearance of 2m from the top of the unit.
- **DO NOT** use this product as a furnace - **ONLY** use as a patio heater.
- **ATTENTION!** - This product will become very hot. **DO NOT** move it during operation.
- **ALWAYS** use the safety tool provided and heat resistant gloves when handling the mesh cover.

CARE & USE

- Ensure that the product is positioned on a permanent flat, stable, heat resistant, non-flammable surface away from flammable items.
- Ensure that the product has a minimum of 2m overhead clearance and has a minimum of 2m clearance from other surrounding items.
- Decide on the location as above. If it is necessary to move it once it has cooled, please lift (do not drag) the product across the floor. Wait until fully cool before moving.
- The unit may be left outside all year if a weatherproof cover is used to help protect it from bad weather.
- As this model is made from steel, the surface will age and develop surface rust as soon as it is placed outside and from first use. This is to be expected, does not affect use and is not a product fault. Please see below instructions on how to refresh the paint finish if desired.
- To help reduce surface rust, rub the product with an oily rag after each use.
- For safety reasons, always inspect your product prior to use for signs of fatigue and damage, and replace your model as and when necessary. Continuing to use a damaged unit could cause personal injury or damage to property.
- **ALWAYS** use heat resistant gloves during use and when adding fuel.
- The enamel surface may discolour and deteriorate over time.
- Black soot marks can be cleaned from the enamel surface using warm soapy water and a soft cloth. More difficult marks can be cleaned using a proprietary kitchen cleaner. However, always check a small test area first to ensure no damage is made to the enamel coating.
- Please note that some inconsistencies may be apparent on the coloured enamel surface. This is due to the hand finished process used to apply the coating and is not a fault of the product.

LIGHTING & REFUELLING

- This product is **ONLY** suitable for use with untreated wood, logs, or charcoal. Ensure that any fuel used is dry, or this may result in a lot of smoke being produced.
- Prepare a stack of loosely crumpled newspaper and place on top of the log grate.
- Pile finely split dry firewood or kindling on top of the paper.
- To light the newspaper, use long safety matches or a long nosed lighter.
- Once sufficiently alight, add logs or larger pieces of untreated wood to the unit to increase the heat slowly.
- **DO NOT** overload with fuel, only one or two logs is sufficient.
- **ALWAYS** use heat resistant gloves and the safety tool when adding fuel and handling the mesh cover, as the unit will become very hot.

COOKING ON YOUR FIREPIT

- Add 0.5 kg of charcoal on top of the log grate and light according to the instructions.
- It is recommended that the unit is heated up and the fuel kept red hot for at least 30 minutes prior to first cooking on the unit.
- **DO NOT** cook before the fuel has a coating of ash.
- Using heat resistant gloves and the grill handles provided, place the grill into the product ensuring it is stable.
- If refuelling is required, **ALWAYS** use heat resistant gloves and grill handles provided to remove the grill as this will be very hot.
- When finished **DO NOT** remove the grill until the unit has completely cooled or remove using heat resistant gloves and grill handles provided, carefully placing the hot grill onto a heat resistant surface.

FOOD COOKING INFORMATION

- **DO NOT** cook before the fuel has a coating of ash.
- **ALWAYS** wash your hands before and after handling uncooked meat and before eating.
- **ALWAYS** keep raw meat away from cooked meat and other foods.
- Before cooking ensure grill surfaces and tools are clean and free of old food residues.
- **DO NOT** use the same utensils to handle cooked and uncooked foods.
- Ensure all meat is cooked thoroughly before eating.
- **CAUTION!** – eating raw or under cooked meat can cause food poisoning (e.g. bacteria strains such as E.coli).
- To reduce the risk of under cooked meat cut open to ensure it is cooked all the way through.
- **CAUTION!** – if meat has been cooked sufficiently the meat juices should be clear and there should be no traces of pink/red juice or meat colouring.
- Pre-cooking larger pieces of meat and joints is recommended before finally cooking on your grill.
- After cooking **ALWAYS** clean the grill cooking surfaces and utensils. The grill should be cleaned using warm soapy water. Not suitable for the dishwasher.

EXTINGUISHING

- To extinguish – stop adding fuel and allow fire to die or douse with sand. **DO NOT** use water as this may damage the product.

STORAGE

- When not in use, and if stored outside, cover the product once it has cooled completely with a weatherproof cover.

Parts list

1 (1x)



 
5 (1x)




8 (1x)



2 (1x)

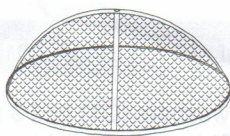

6 (1x)

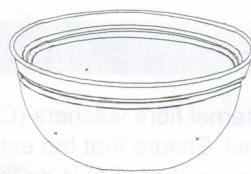 

A (3x)



Bolt

B (3x)



Large nut

C1 (6x)



 
Internal metal washer

C2 (3x)



External fibre washer

3 (1x)



7 (1x)



D (3x)



Bolt

4 (2x)



E (3x)



 
Small nut

Prior to Assembly, read the instructions carefully. Check all parts against the parts list. Carry out assembly on a soft surface to avoid scratching the finish. Please retain this information for future reference.

For ease of assembly only loosely tighten bolts and then tighten fully when assembly is complete.

WARNING - DO NOT over tighten bolts; only tighten with moderate pressure to avoid damaging the bolts or components of the product.

Assembly Diagram

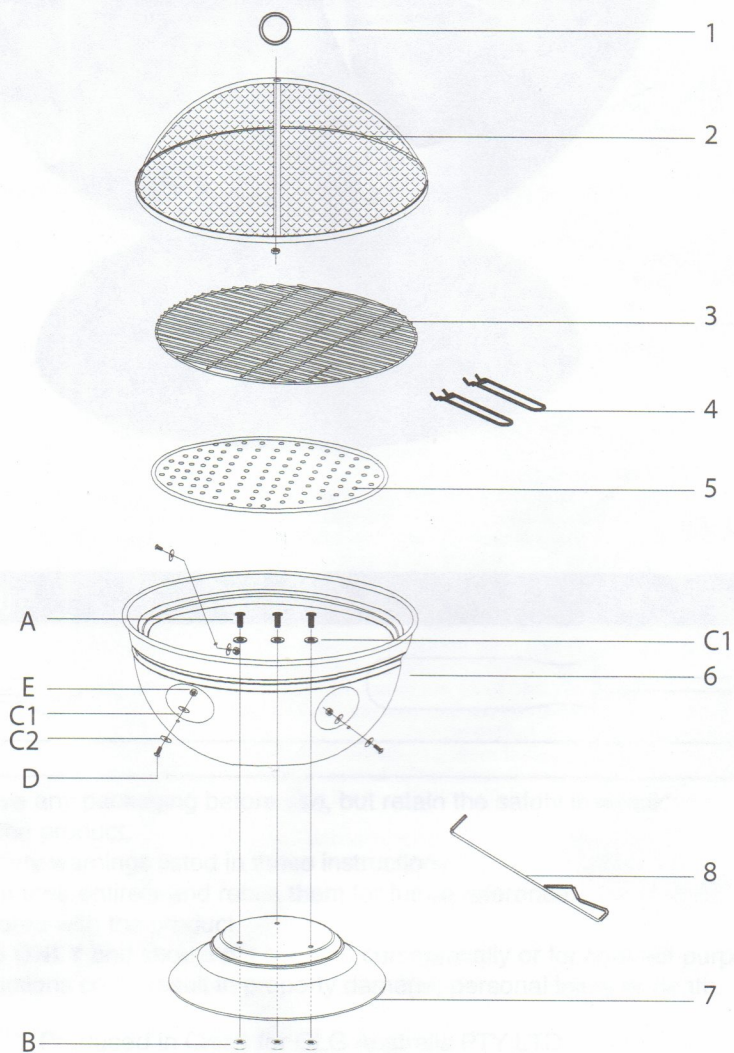

Assembly Instructions

IMPORTANT! - Remove any packaging before use, but retain the safety instructions and store them with this product.

ASSEMBLY

STEP 1 - Connect Firebowl (6) and base (7) with 3x bolts (A), nuts (B), and internal metal washers (C1).

STEP 2 - Connect 3 x bolts (D), 3 x external fibre washers (C2), 3 x internal metal washers (C1) and 3 x nuts (E) into the side of the firebowl. Ensure that the external fibre washer (C2) is on the outside of the firebowl and the internal metal washer (C1) is on the inside of the firebowl. Do not overtighten.

STEP 3 - Secure the ring handle (1) to the mesh cover (2), using the pre-attached nut.

STEP 4 - Place log grate (5), chrome plated cooking grill (3) and mesh cover (2) onto the firebowl (6).

Your product is now ready to use, but please ensure you have read these instructions thoroughly prior to use.

- ALWAYS use heat resistant gloves when handling the firebowl.
- The firebowl is designed to be used on a flat, stable surface.
- Check that the firebowl is clean and free of any debris before use.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.

LIGHTING & BURNING

- The firebowl is designed to be used on a flat, stable surface.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.

COOKING ON YOUR FIREBOWL

- The firebowl is designed to be used on a flat, stable surface.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.

GOOD COOKING INFORMATION

- The firebowl is designed to be used on a flat, stable surface.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.
- Do not use the firebowl for anything other than cooking.

EXTINGUISHING

- The firebowl is designed to be used on a flat, stable surface.
- Do not use the firebowl for anything other than cooking.